

D-Link®

Quick Installation Guide
for Windows 98/ME
/2000/XP/2003

DFE-520TX

10/100Mbps Ethernet
PCI Adapter

Contents of Package:

- DFE-520TX Fast Ethernet Adapter
- Quick Install Guide
- CD-ROM, which includes driver software

If any of the above items are missing, please contact your reseller.

DO NOT insert the DFE-520TX into the computer's PCI slot before installing the drivers.

Pre-installation Procedures:

If you have already installed the DFE-520TX into a PCI slot, advanced users may utilize the “Add New Hardware Wizard” to manually specify the location of the driver on the CD-ROM.

Otherwise, we strongly recommend canceling the “Add New Hardware Wizard” and instead using the “Install Drivers” program in the CD-ROM.

Here is quick summary of the proper installation procedure:

- **Run** the driver installation from the DFE-520TX CD-ROM.
- **Turn Off** the computer and **install the DFE-520TX** into the PCI slot.
- **Restart** the computer to complete the installation.



Installing the DFE-520TX Drivers

- Turn **ON** the computer.
- Insert the **driver CD**, which is included with the DFE-520TX, into the CD-ROM drive.

The following window will appear.




Click on “Install Drivers.”

For Windows 2000, Windows XP and Windows 2003 users, the following screen will appear.



Click OK

For Windows 98/98SE and ME users, this screen will be displayed.

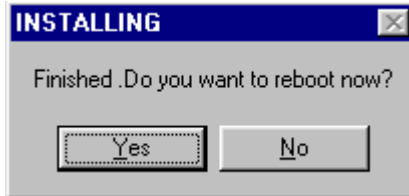


Click Yes

Next, TURN OFF the computer and unplug the power cord.



Installing the DFE-520TX into the computer's PCI slot

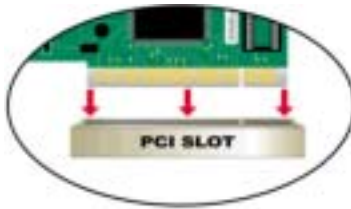

Note: To avoid static electric charges, please touch an unpainted screw on the outside of the power supply before installing or working with the DFE-520TX.

- **Turn off** your computer and **unplug** the power cord.
- **Remove** the back cover of your computer. (Refer to your computer's manual if needed.)
- **Locate** an available PCI slot. PCI slots are usually white or cream colored.
- **Remove** the backplate (the small piece of metal that covers the opening for the PCI card on the back cover that you just removed.)
- **Insert** the DFE-520TX carefully and firmly into the PCI slot.
- **Secure** the DFE-520TX with the screw from the backplate.
- **Replace** your computer's cover.

3

Finishing the Installation

- **TURN ON** the computer.

For *Windows 98/98SE and Windows ME* users, the following screen will appear.



Click Yes, to restart the computer.

For *Windows 2000, Windows XP and Windows 2003* users, this screen will be displayed.



Click OK, to complete the installation.

(Note: Windows 2000/XP/2003 will not require a restart.)

4

Checking the Installation

- Go to START>RUN.
- Type “winipcfg.” (In Win2000, type “ipconfig/all.”) In some cases it may be necessary to “Release and Renew” the IP address. Make sure to select the DFE-520TX as the specified adapter in the pull down menu.
- If the IP address belongs to the same IP range and subnet mask as the local network, then open the web browser and test the Internet connection.

D-Link[®]
Building Networks for People

6FE520TXML01